



BALTECO


BATHROOMS













FORMA_N

Dušiseina paigaldusjuhend
Инструкция по установке душевой стенки
Installation of shower wall

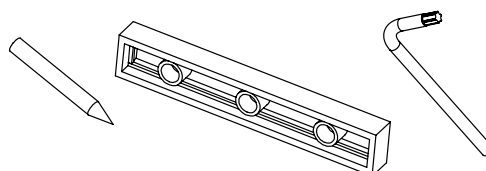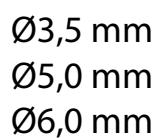

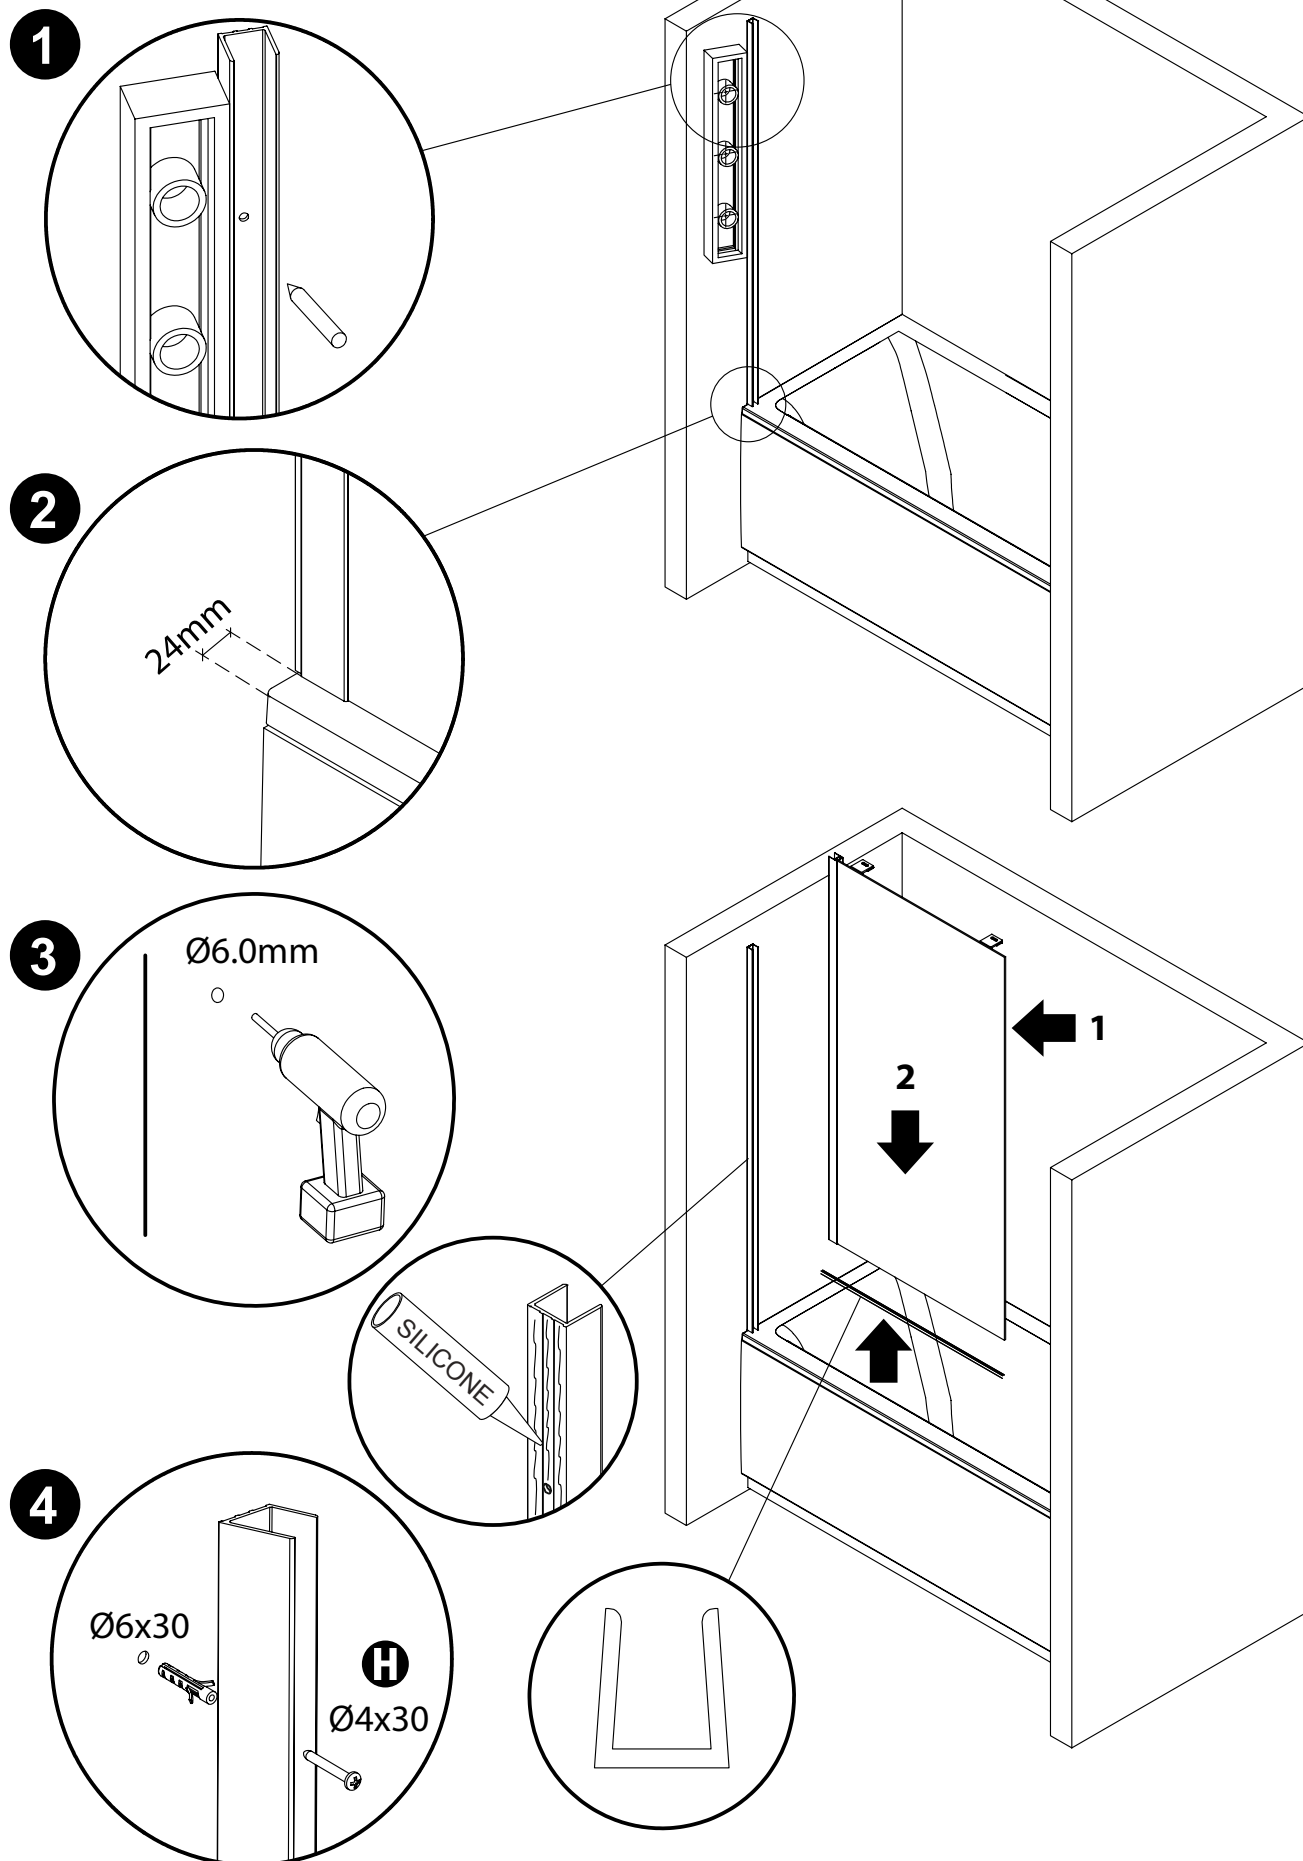


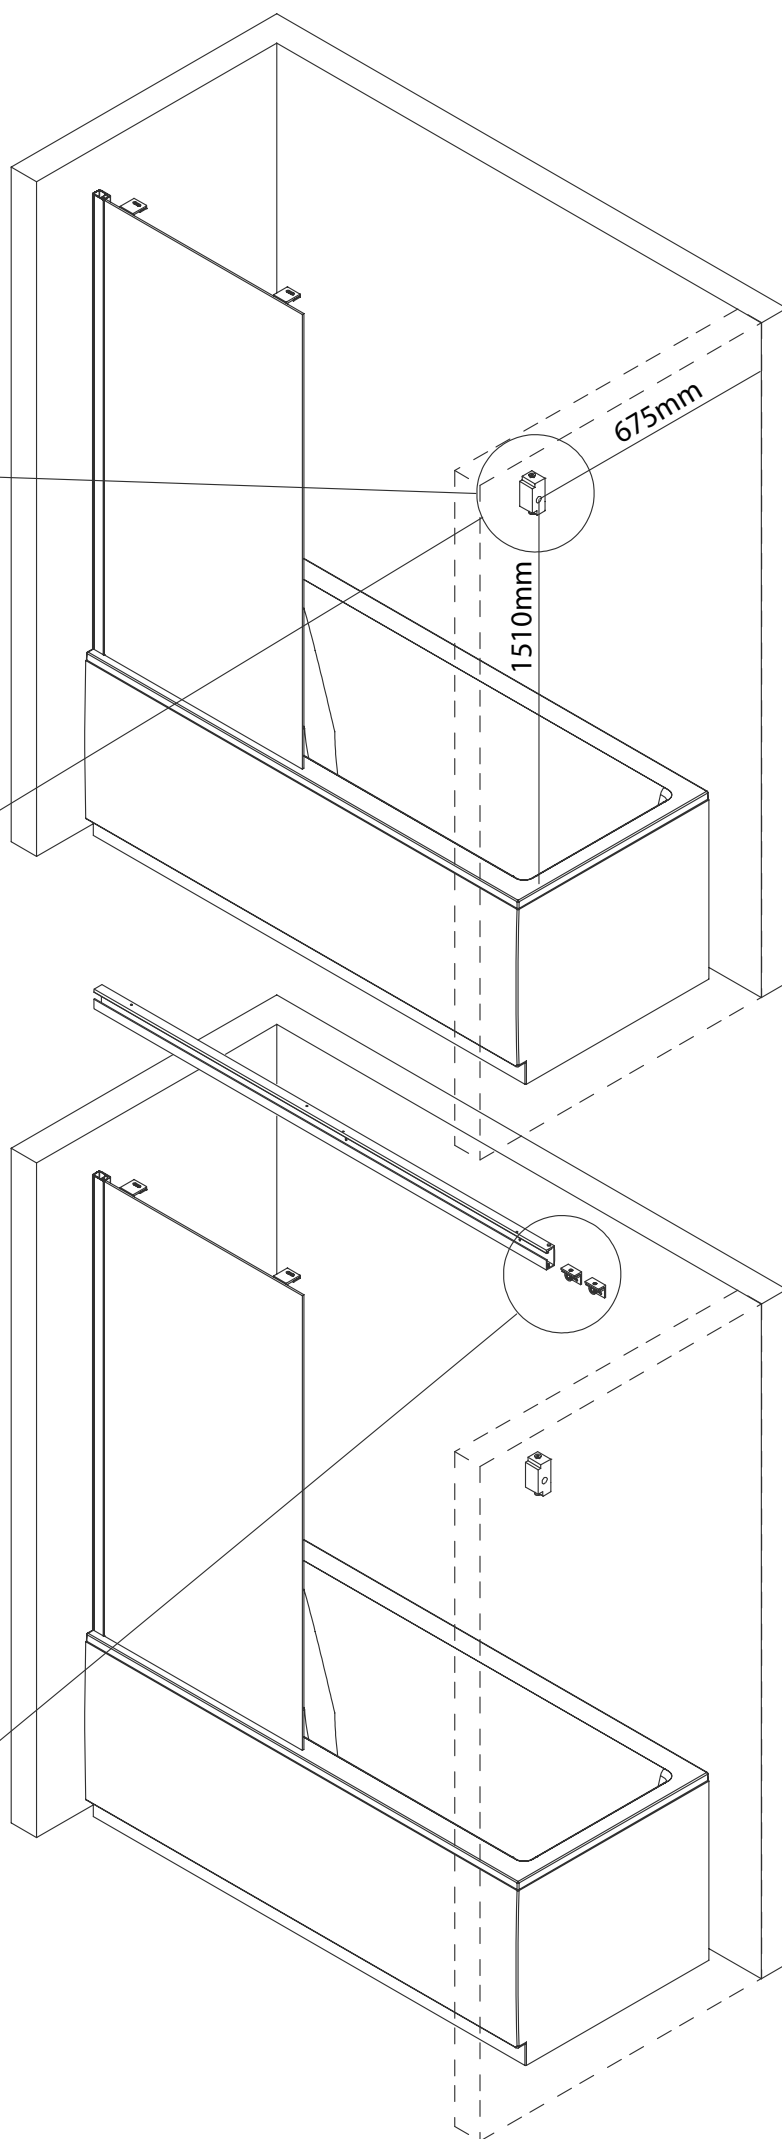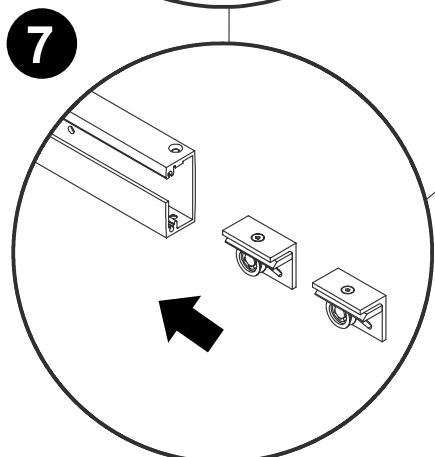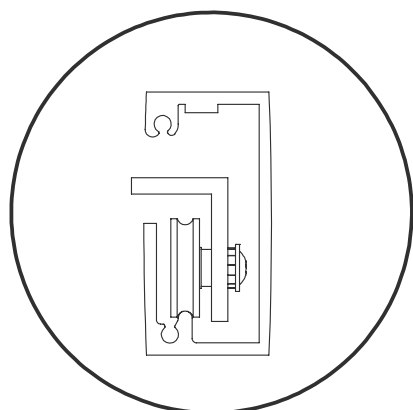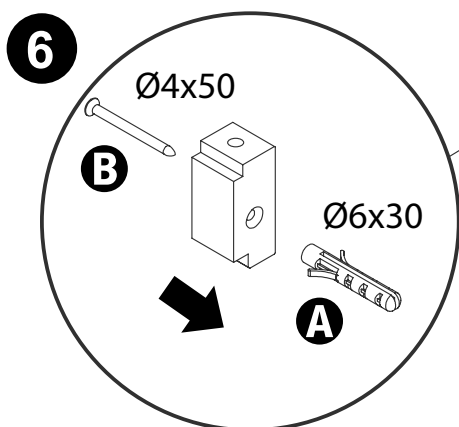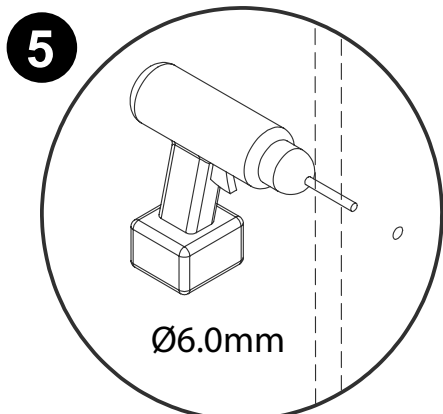

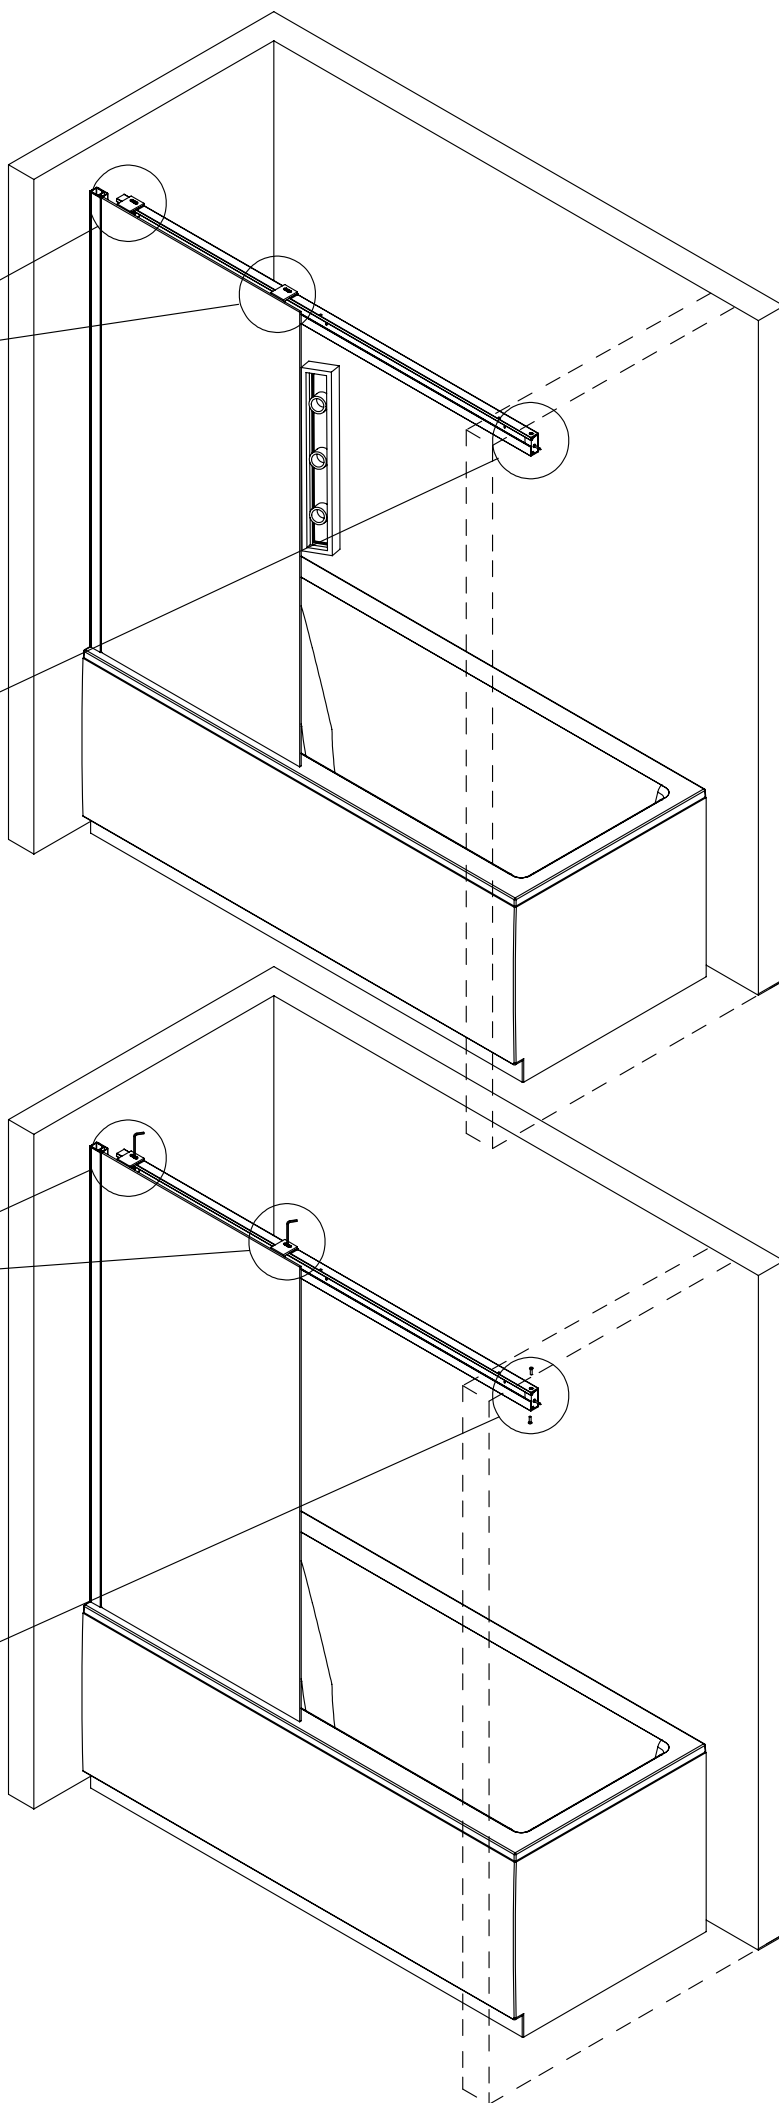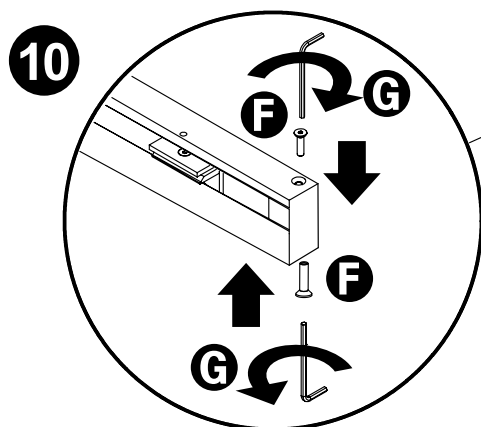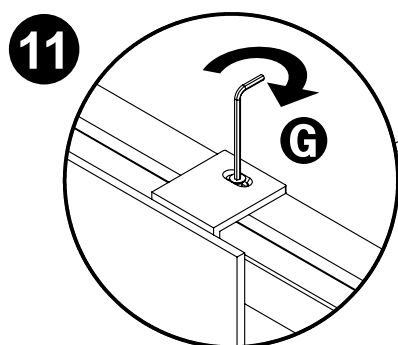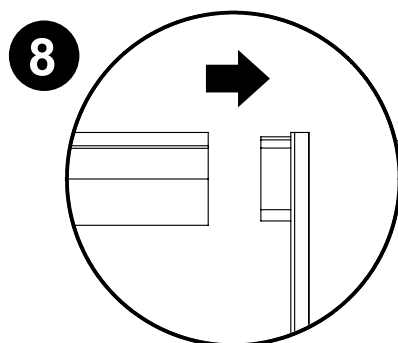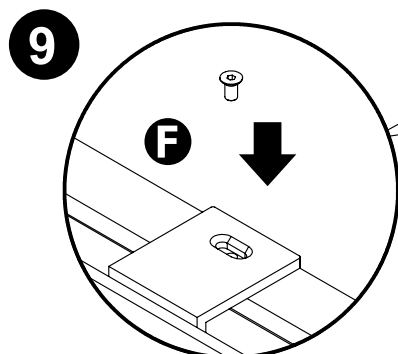


12

Ø3,5mm





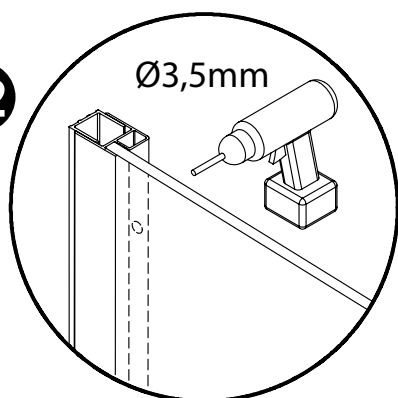








13






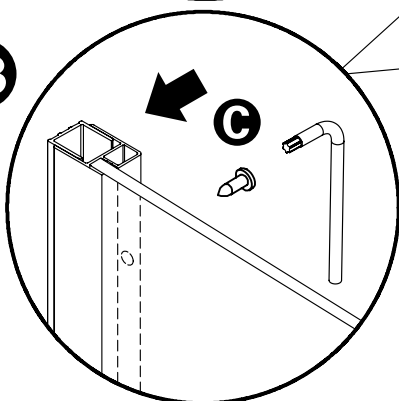



14

G

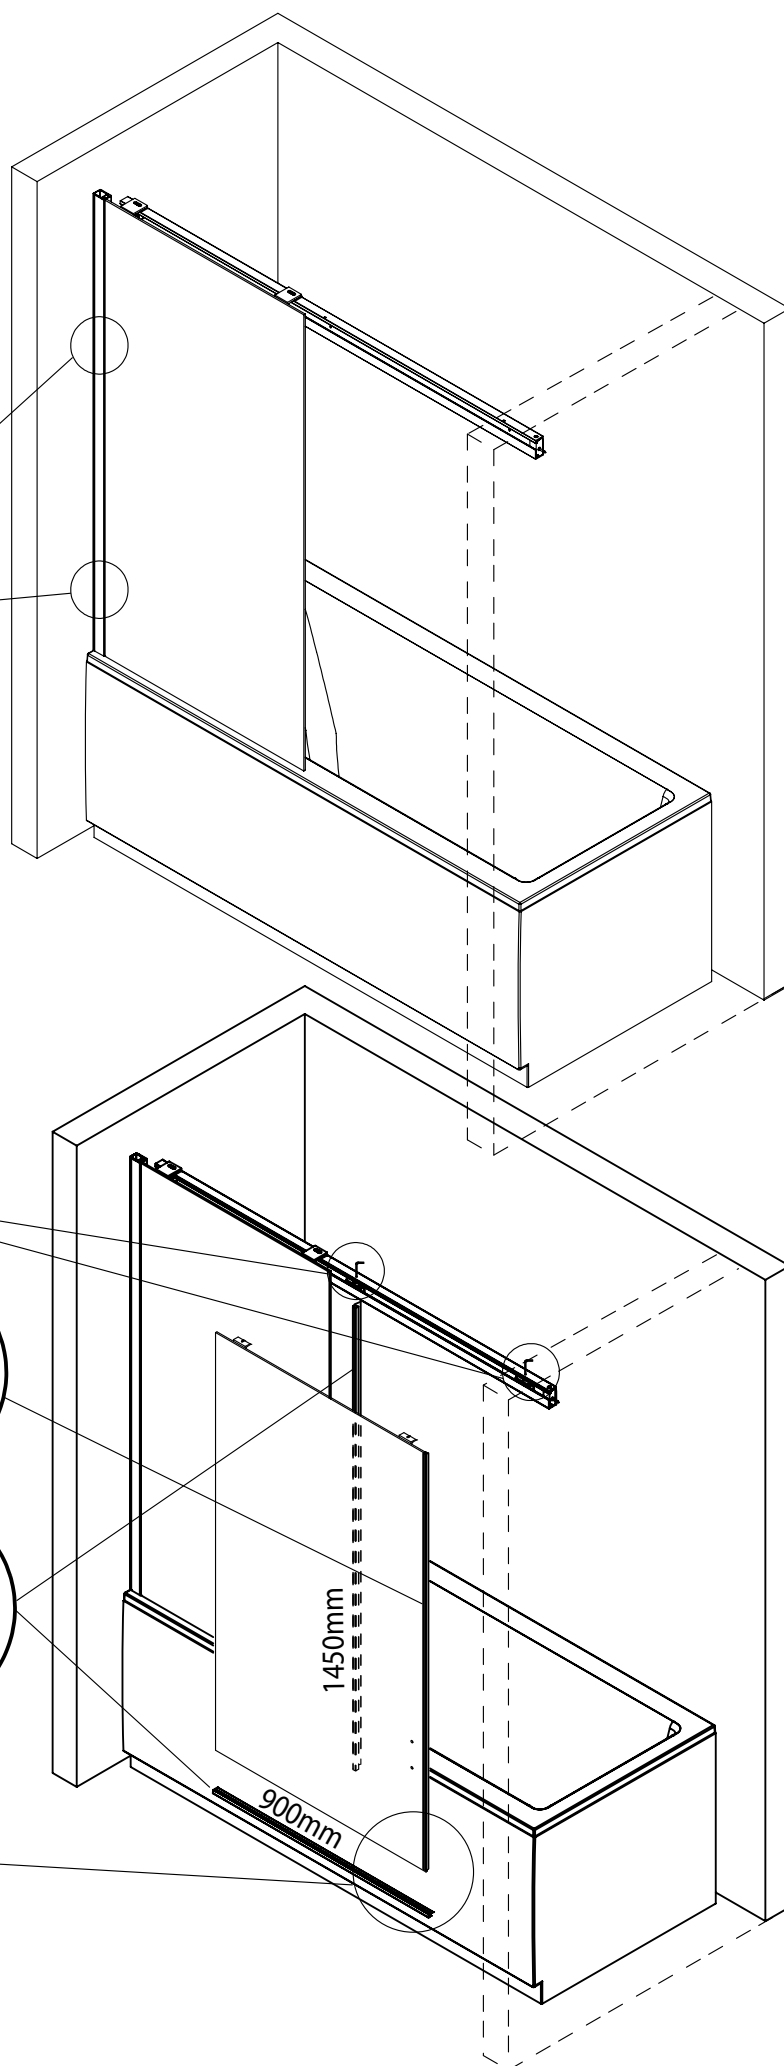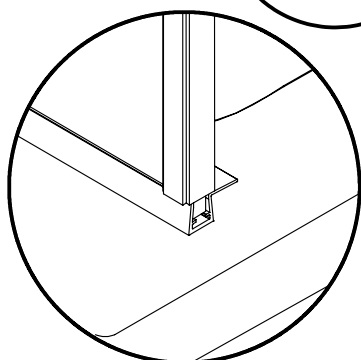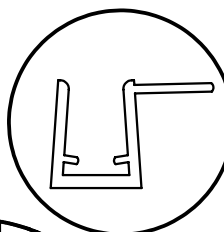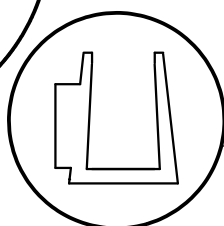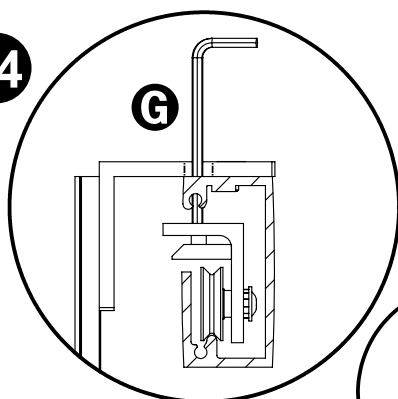


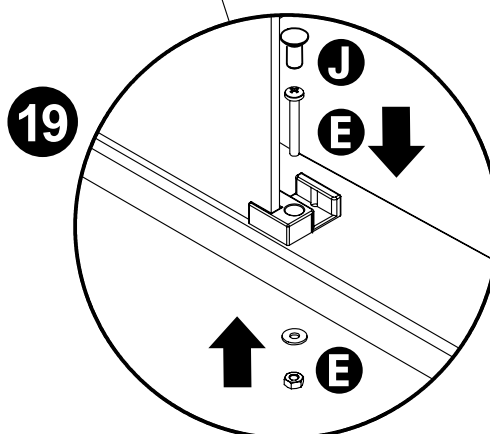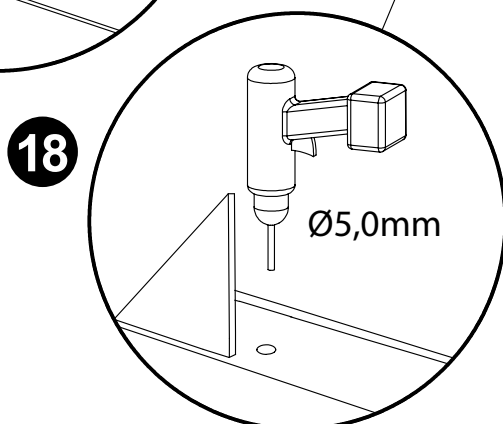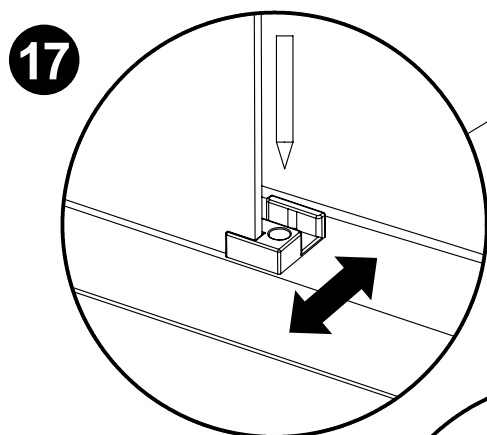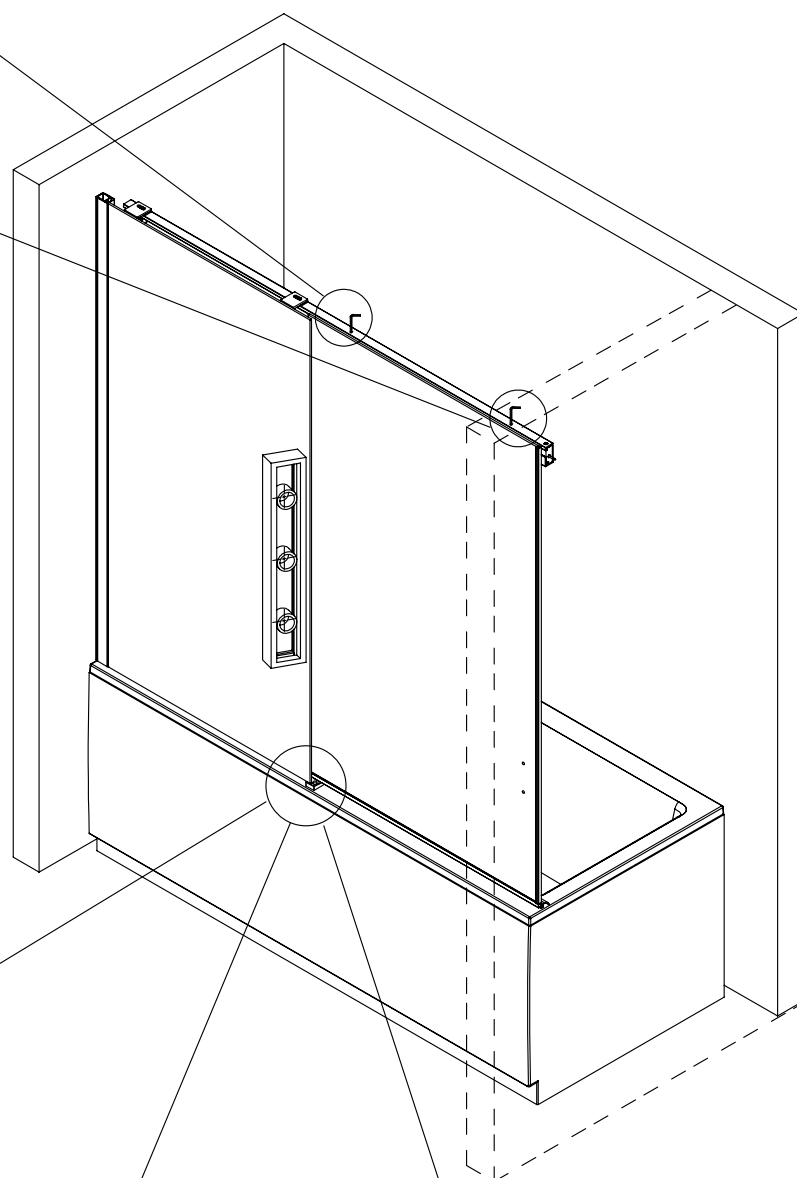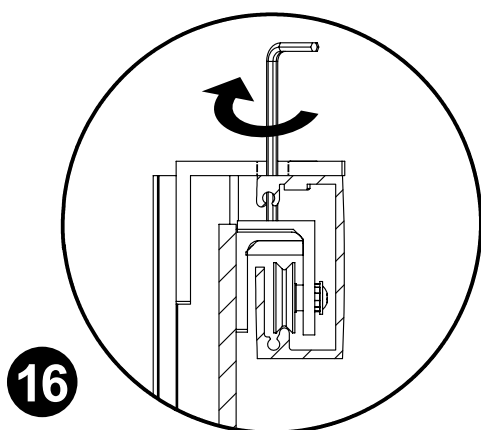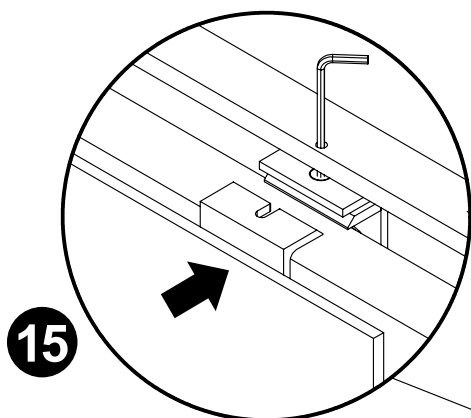

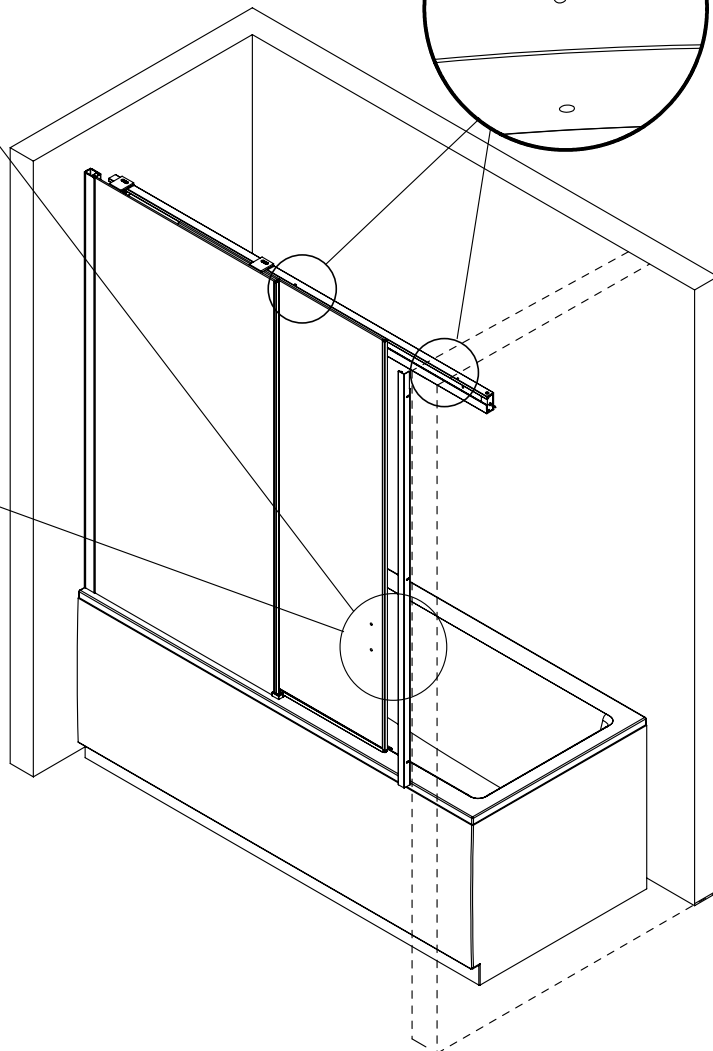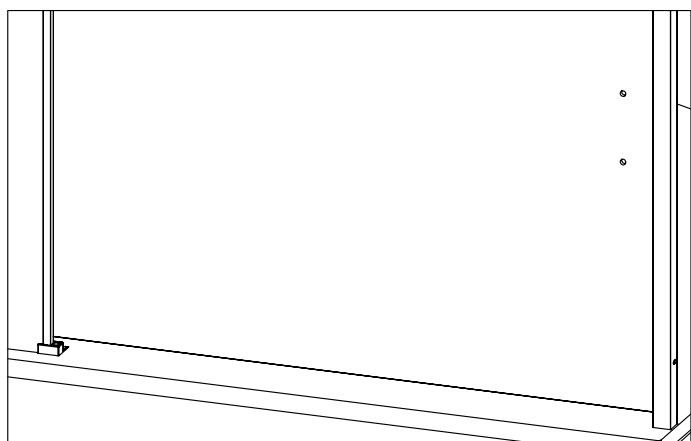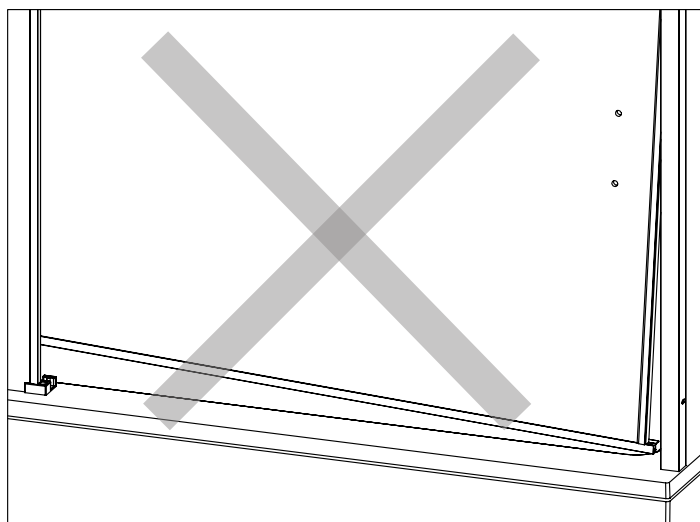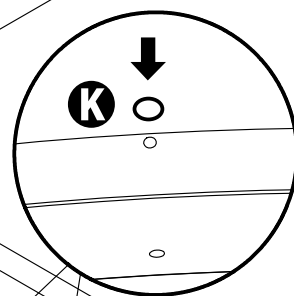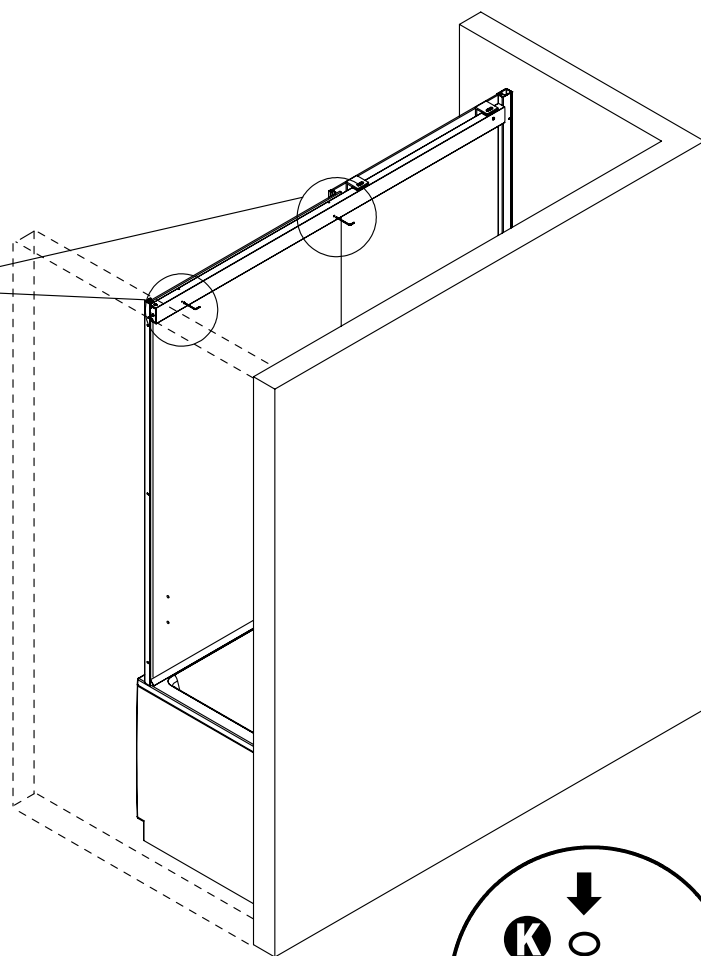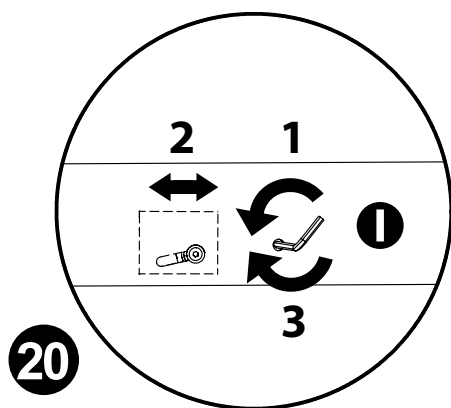

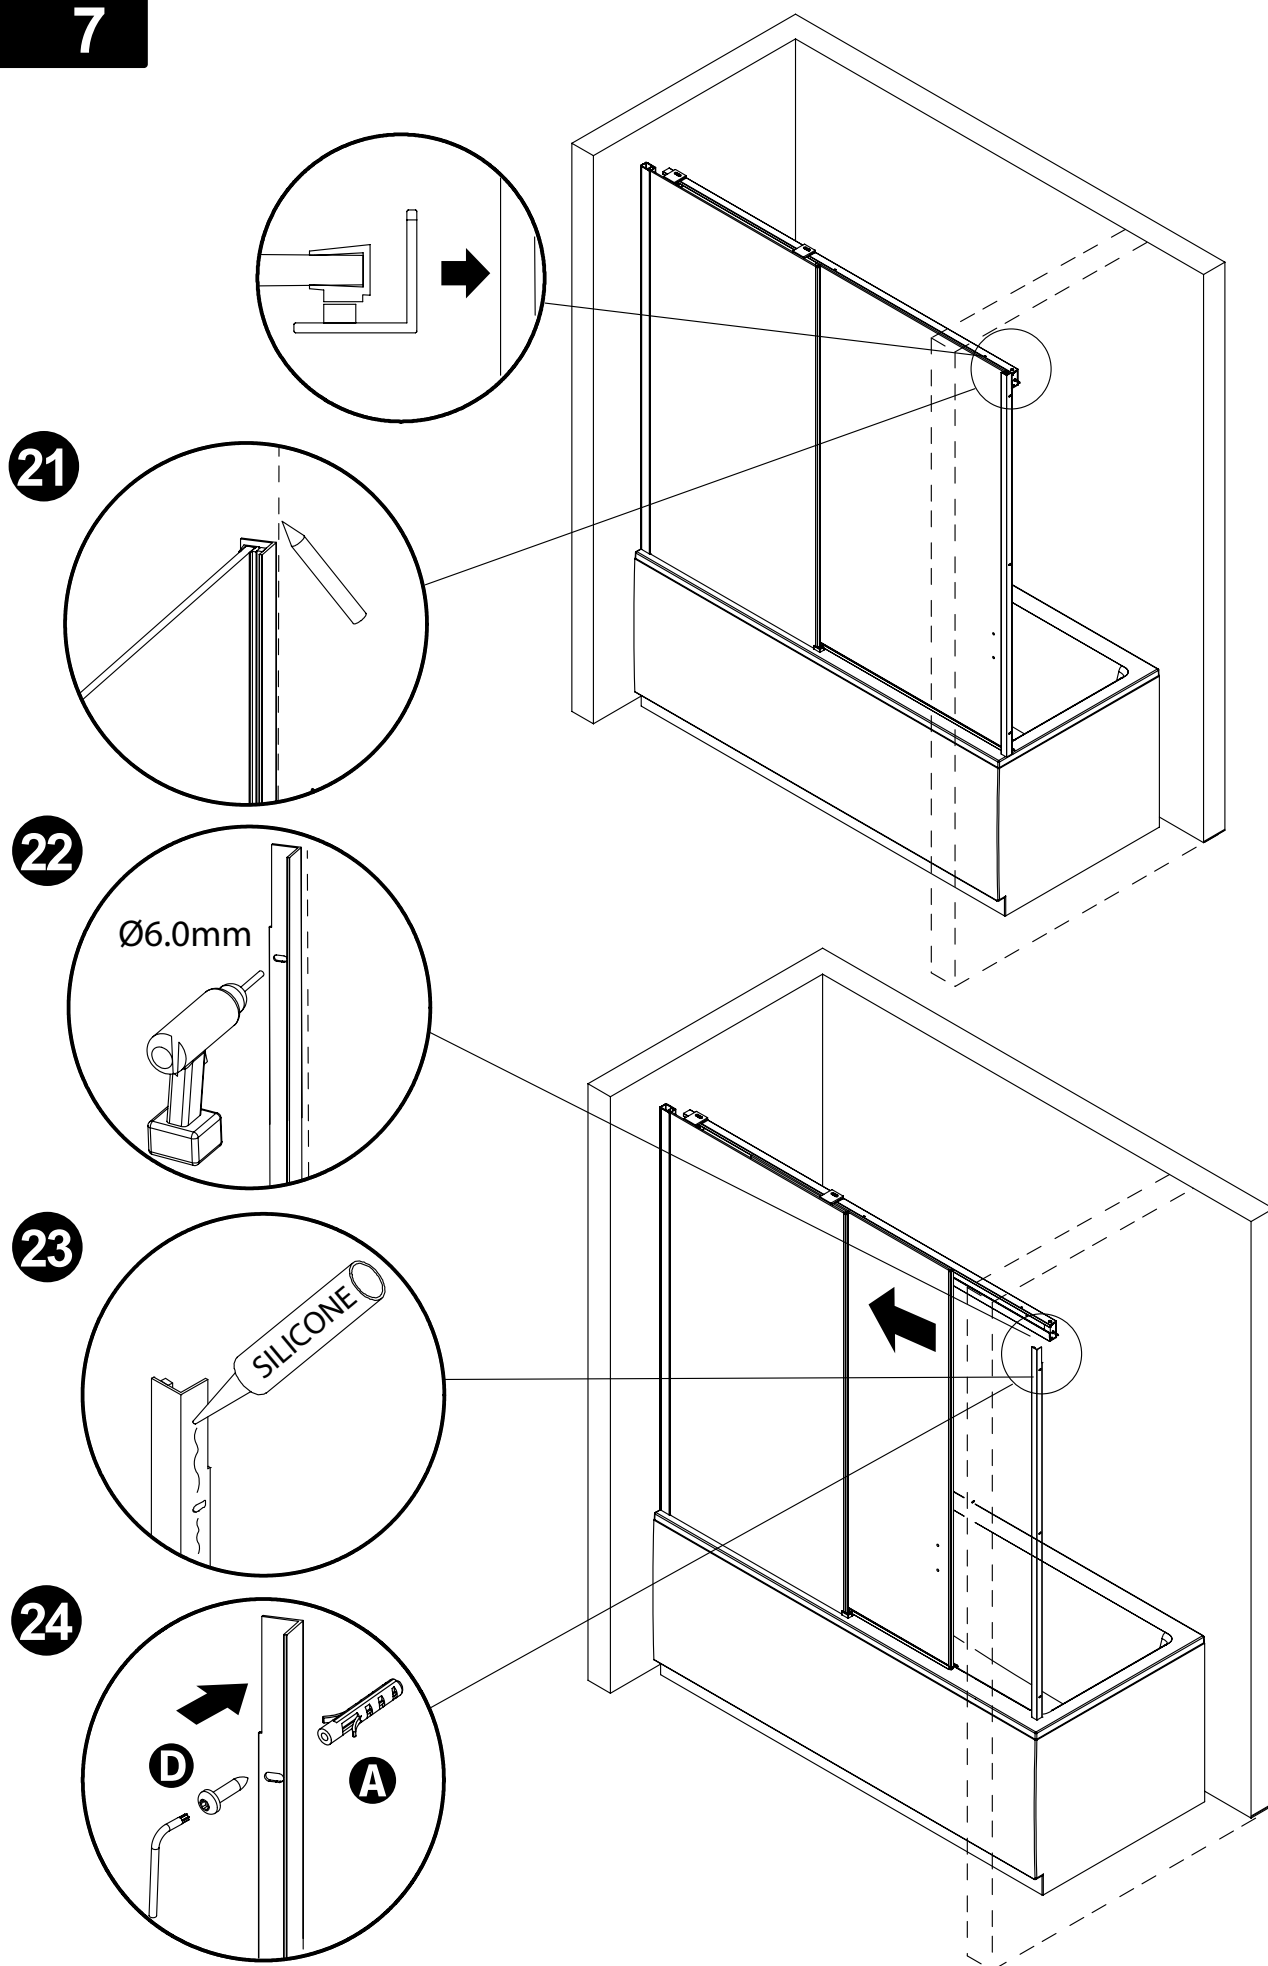

25

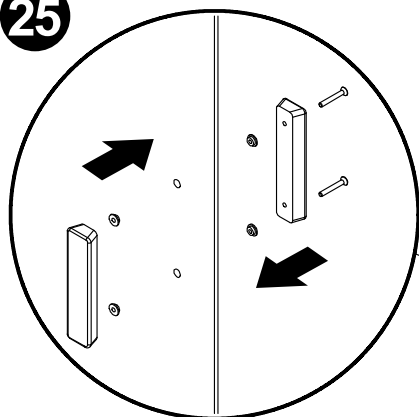

26

